

P.O. Box 670  
1107 Progress Street  
Sturgis, MI 49091 USA

Toll Free: 800-726-9367  
Phone: 269-651-2300  
Fax: 269-651-9326


Website: [www.OwensProducts.com](http://www.OwensProducts.com)  
Email: [Sales@OwensProducts.com](mailto:Sales@OwensProducts.com)



**THE HEAVY DUTY STEP YOU'VE BEEN WAITING FOR HAS ARRIVED!**



**The all new Owens Fusion Step is here!**

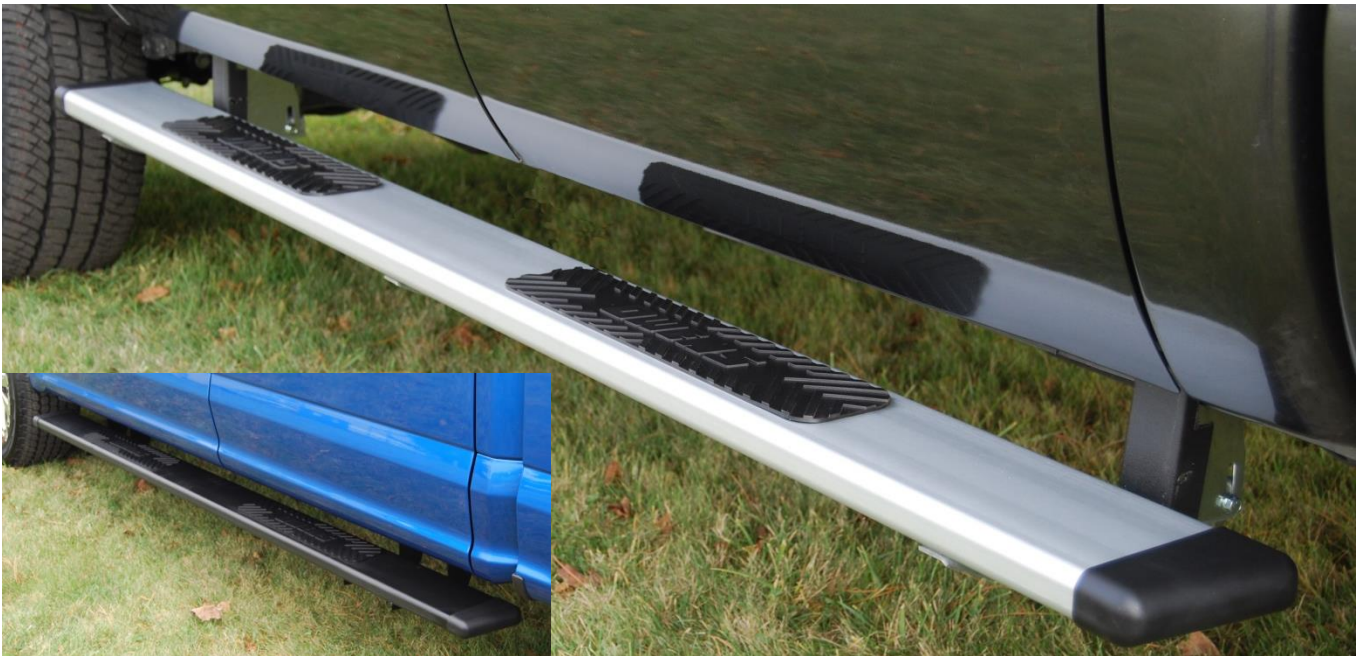

Available in Brushed Nickel anodized aluminum or Textured Black Powder Coat Aluminum finishes.

- ✦ New for 2016 – This is undoubtedly the strongest step we have ever offered.
- ✦ **This step combines our past with visions of our future.**
- ✦ A full 5 ¾" stepping surface with 4" x 20" TPO sure grip step pads strategically placed for easy entry into your vehicle.
- ✦ **.200 Thick extruded aluminum with solid one piece construction.**
- ✦ Universal lengths help reduce SKU's.
- ✦ **No Drill, vehicle specific, easy to install bracket kits sold separately.**
- ✦ All applications tested to over 550 lbs.
- ✦ **Proudly built in the USA.**

P/N	Description
OC5151B-01	Standard Cab Textured Black - Must order brackets separately
OC5177B-01	Extended Cab Textured Black - Must order brackets separately
OC5187B-01	Crew Cab Textured Black - Must order brackets separately
OC5151N-01	Standard Cab Brushed Nickel - Must order brackets separately
OC5177N-01	Extended Cab Brushed Nickel - Must order brackets separately
OC5187N-01	Crew Cab Brushed Nickel - Must order brackets separately
10-1218	07-16 GM Silverado (Except Diesel) - NO DRILL
10-1304	15-16 Colorado/Canyon Bracket Kit - NO DRILL
10-1278	15-16 Ford F150 Bracket Kit - NO DRILL
BK133	99-16 Ford Super Duty Bracket Kit - NO DRILL
10-1255	09-16 RAM Bracket Kit - NO DRILL

**Call and order yours today!**